

KCL®
Kolberg Caspary Lautom as

OSM

Assembly Manual

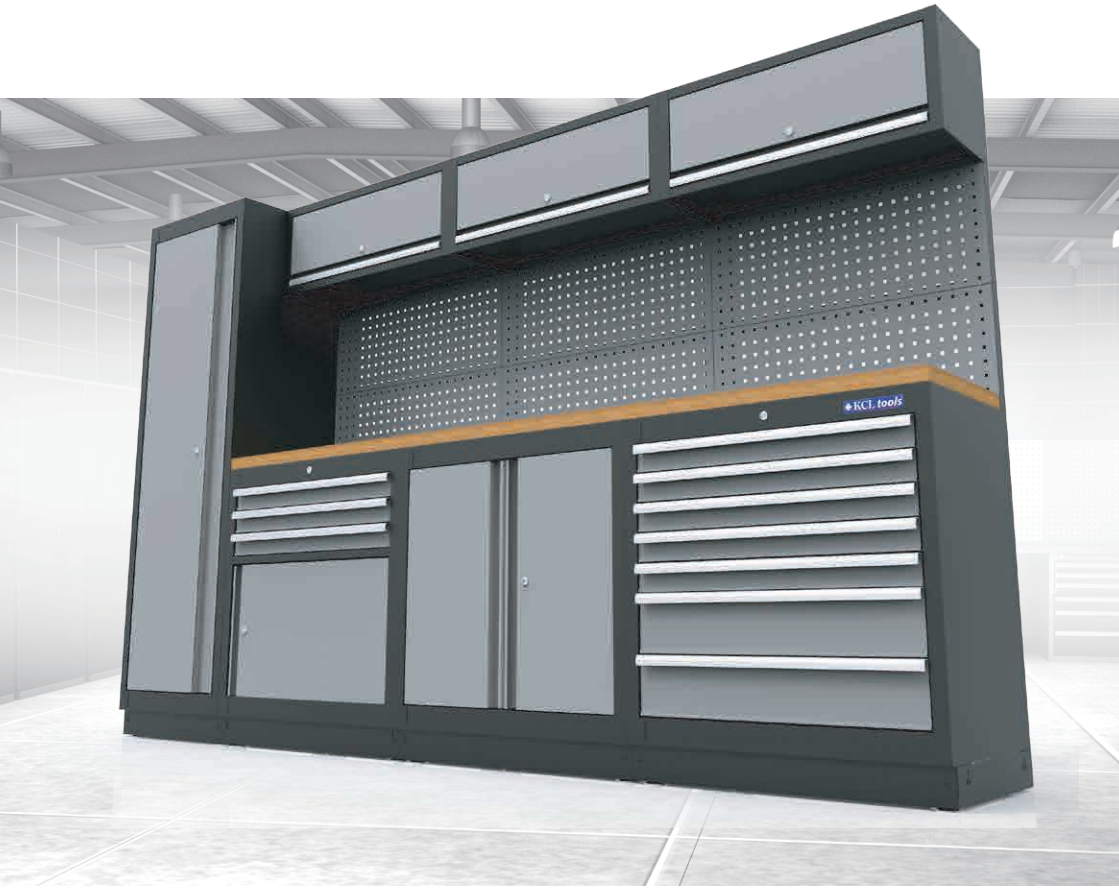

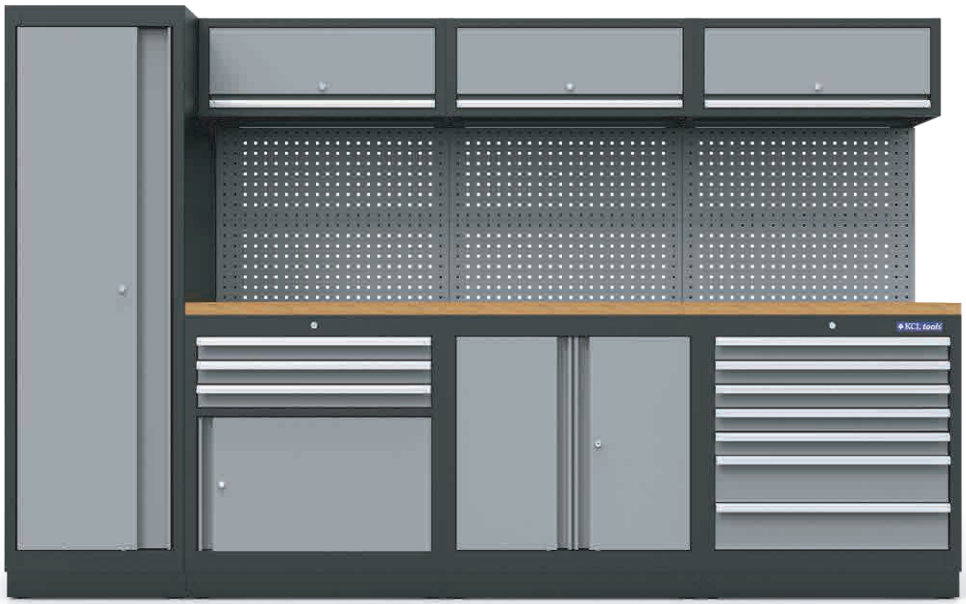


Before Assembly

1. Unpacking:
- When unpacking the units, please ensure the unit is at up position.
- Please do not use sharp point tools for unpacking
- After unpacking unit, inspect carefully for any damage that may have occurred during transit. Check for loose, missing, or damage parts before assembly.

2. Assembly Tool Request:
You might need following tools to assemble OSM:
- 1/4” Dr. T-handle / 1/4” Dr. Ratchet handle /1/4” Dr. Power Impact Wrench
- 1/4” Dr. Socket 10mm & 12mm
- Combination Wrench 10mm & 24mm
- Phillips Screwdriver PH2
- Spirit Level

Exploded Drawing

No.	Description
1	Cabinet
2	Worktop
3	Back Panel
4	Support Bracket (Right)
5	Cupboard
6	Support Bracket (Middle)
7	Support Bracket (Left)
8	Bottom Side Panel for Cabinet
9	Bottom Front Panel
10	Bottom Side Panel for Tall Cabinet

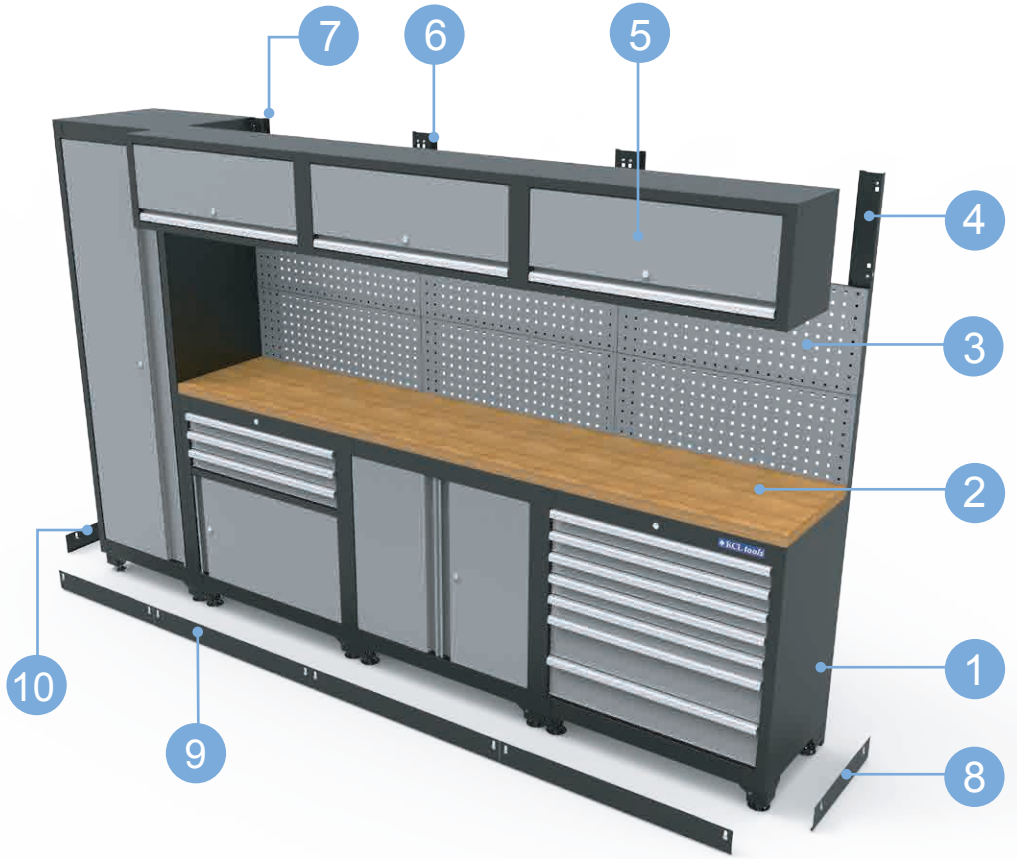

Step 1


Locate the cabinets at the final position and leave some space for one person to walk through for following steps.



Step 2

1. Apply 6pcs Hex Bolt M6 Screw (a) on back side of the cabinet. Do not tighten the Hex Bolt M6 Screw (a). Have about 3-5 screw thread left.
May use Spirit Level to adjust the adjustable feet of cabinet to ensure cabinets are at the same level.

2. Apply the Support Bracket (4, 6, 7) on to it as below diagram. Apply the Support Bracket onto correct location as marked below. Please note Right/Left Support bracket position. Support Brackets have R/L labeling on it for easy identification.

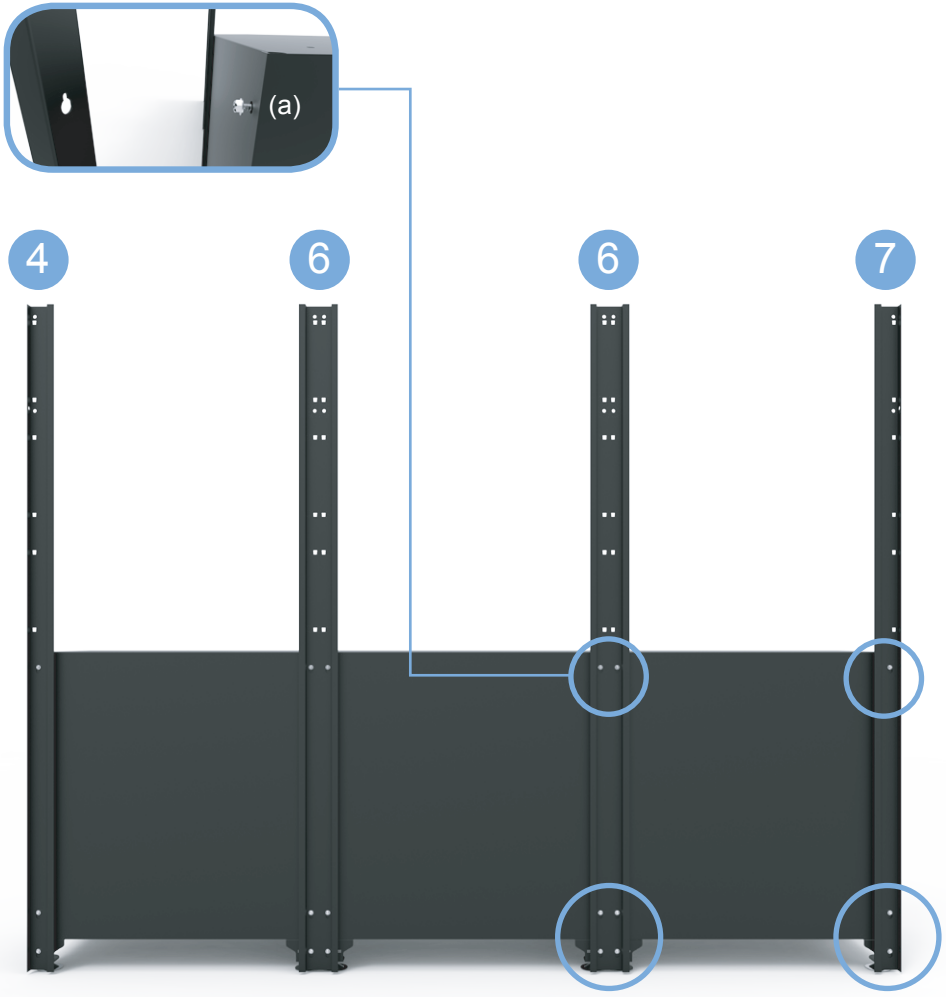

Step 3

Apply the Back Panel (3.) to the Support Bracket as below diagram and push down to fit into right position.



Step 4

1. Apply 2 pcs Phillips M6 Screw (b) on the top of the Support Bracket. Do not tighten the Screw (b) completely. Have about 3-5 screw thread left.


2. Lift and hook the Cupboard (5) to the Phillips M6 Screw (b) on the Support Bracket.

3. Tighten completely the top screws and apply remaining 2 pcs Phillips M6 Screw (b) from inside the Cupboard (5) to the Support Bracket to secure the structure.



Step 5

Tighten the screw on the cabinet and push whole station to desired location.
This might need 3-4 people to work together.

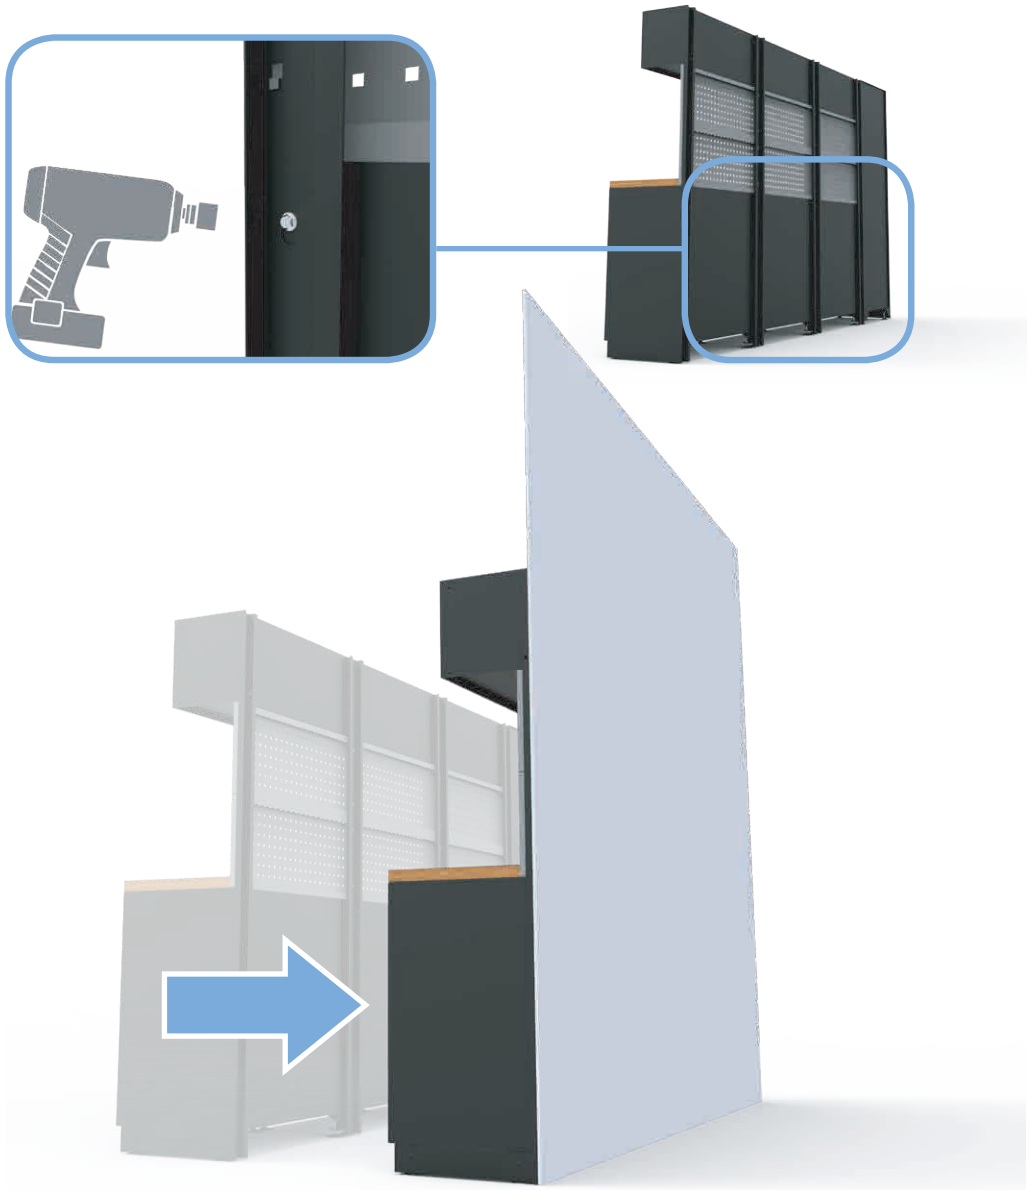


Step 6

Use Phillips M6 Screw (b) and Nut to link between the 2 Cupboard and Tall Cabinet.



Step 7


Apply Bottom Front/Side Panel with screw and washer as below diagram.

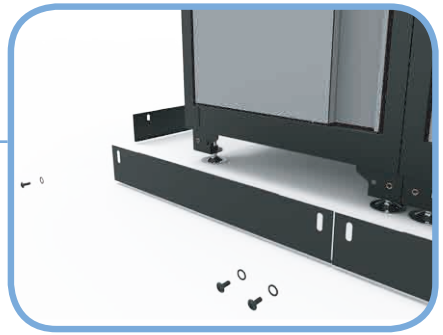



Step 8

Apply Worktop onto the workstation and fix the screw from inside of cabinet.

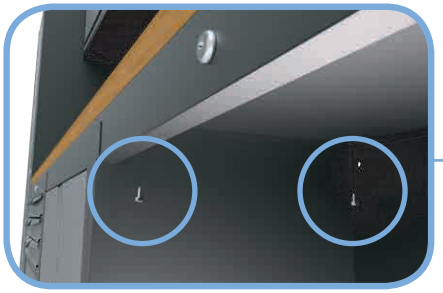



Step 9

Congregations! The workstation is successfully installed!





26"/ 34" Cabinet

I/N	SIZE (mm)
KCL ATN260071A	W677 x D500 x H954
KCL ATN340071A	W861 x D500 x H954



26"/ 34" Closet

I/N	SIZE (mm)
KCL ATN260001	W677 x D500 x H954
KCL ATN340001	W861 x D500 x H954



26"/ 34" Cabinet 3 Drawer with Door

I/N	SIZE (mm)
KCL ATN261031A	W677 x D500 x H954
KCL ATN341031A	W861 x D500 x H954



26" Recycle Bin Cabinet

I/N	SIZE (mm)
KCL ATN260012	W677 x D500 x H954




26" Roller Cabinet

I/N	SIZE (mm)
KCL ATT260071A	W677 x D459 x H994
KCL ATT340071A	W833 x D459 x H994



26"/ 34" Wash Tank Closet

I/N	SIZE (mm)
KCL ATN2600SI1	W677 x D500 x H954
KCL ATN3400SI1	W861 x D500 x H954

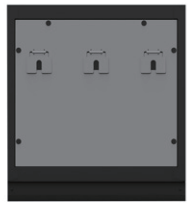

34" Reel Cabinet

I/N	SIZE (mm)
KCL ATN3400AGW	W861 x D500 x H954



Corner Cabinet

I/N	SIZE (mm)
KCL ATN30001A	W883 x D883 x H954




26"/ 34" Cupboard

I/N	SIZE (mm)
KCL ACN260001A	W677 x D300 x H342
KCL ACN340001A	W861 x D300 x H342



24"/ 44" Wall Cabinet

I/N	SIZE (mm)
KCL ATN240001	W600 x D525 x H1982
KCL ATN440001	W1120 x D525 x H1982




26"/ 34" Perforated Panel

I/N	SIZE (mm)
KCL N001	W677 x D20 x H342
KCL N002	W861 x D20 x H342



Wall Tool Panel with Shutter

I/N	SIZE (mm)
KCL AB68001	W1722 x D150 x H1025

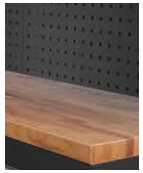

Wooden Worktop

I/N	Width (mm)	Applied for
KCL N005-03	1725	34"+34"
KCL N005-04	1541	26"+34"
KCL N005-07	2404	34"+34"+26"
KCL N005-08	1357	26"+26"
KCL N005-09	2220	26"+26"+34"
KCL N005-11	2588	34"+34"+34"
KCL N005-12	2036	26"+26"+26"



Stainless Worktop

I/N	Width (mm)	Applied for
KCL S005-03	1725	34"+34"
KCL S005-04	1541	26"+34"
KCL S005-07	2404	34"+34"+26"
KCL S005-08	1357	26"+26"
KCL S005-09	2220	26"+26"+34"
KCL S005-11	2588	34"+34"+34"
KCL S005-12	2036	26"+26"+26"




Support Bracket

I/N	SIZE (mm)
KCL N003-RL	W90 x D30 x H2000
KCL N003-M	W146 x D30 x H2000




L Type Support Bracket for Worktop

I/N	SIZE (mm)
KCL P-SBL-01	W498 x D40 x H40

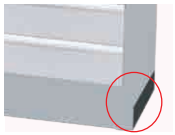


Bottom Side Panel for Cabinet

I/N	SIZE (mm)
P-MST-01	W472 x D10 x H90

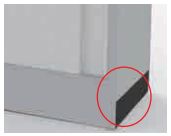

Bottom Side Panel for Wall Cabinet

I/N	SIZE (mm)
P-MST-02	W498 x D10 x H90



Shelf for 24" Wall Cabinet

I/N	SIZE(mm)
KCL P-MST-03	W524 x D476 x H13



Shelf for 26" Closet

I/N	SIZE (mm)
KCL P-MST-04	W601 x D464 x H13



Shelf for Corner Cabinet

I/N	SIZE (mm)
KCL P-MST-05	W372 x D853 x H13
	W538 x D853 x H13



Tool Hanger

I/N	Lengh
KCL P-TH001	1.5"
KCL P-TH001	4"



26"/ 34" Document Shelf

ITEM NO.	SIZE(mm)
KCL N007-1	W644 x D246 x H91
KCL N007-2	W834 x D246 x H91



26"/ 34" Box Rack

ITEM NO.	SIZE (mm)
KCL N008-1	W676 x D18 x H78
KCL N008-2	W860 x D18 x H78



Impact Wrench Holder

I/N	SIZE (mm)
KCL MAA011A	W115 x D91 x H121



Impact Socket Holder

I/N	SIZE (mm)
KCL MAA034	W150 x D30 x H50

OSM

Organized Storage Modules

KCL®

Kolberg Caspary Lautom as

Det norske alternativ



Kolberg Caspary Lautom as
Postboks 70, 1371 Asker
Røykenveien 70, 1386 Asker
Norge/Norway
Kundeservice: + 47 66 75 30 30
Tlf. + 47 66 75 30 00
Faks: + 47 66 75 30 01

www.kcl.no

Copyright © reserved by KCL

v.1702